




# Window Well Pictures

## Installation Instructions

- Step 1. Measure the complete inside circumference of the window well as shown at right "Measure twice-cut once".
- Step 2. Scrape back landscaping rock in window well. Measure the complete height of the window well as shown below.

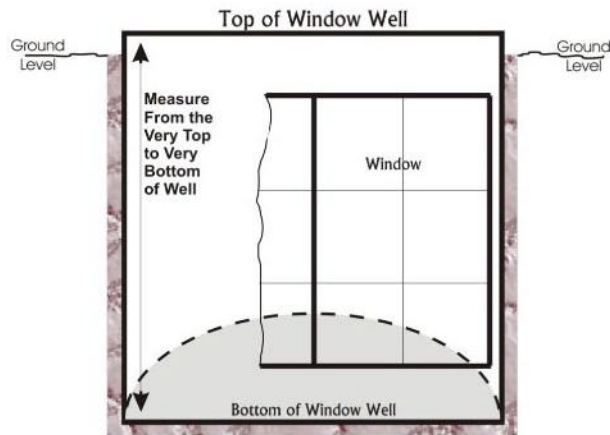

**Vertical:** On this measurement you want to completely cover the window well. Measure exactly, or start of a bit tall, then finalize trims.

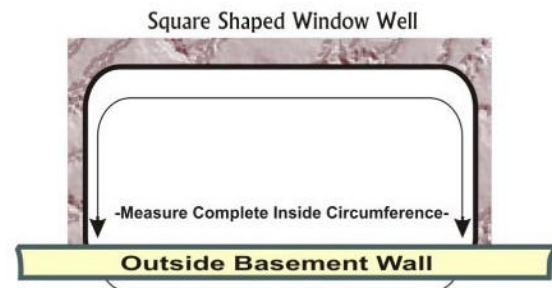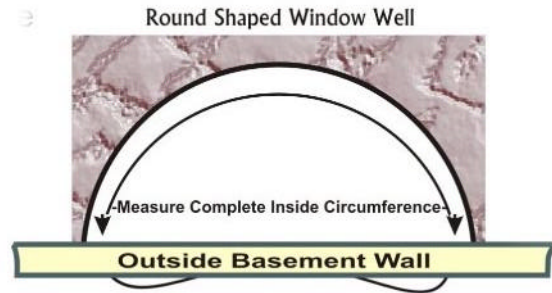

**Horizontal:** This doesn't need to be a tight fit. Cut 1 inch less than the total measurement, it makes installation much easier!

- Step 3. Trim the excess off of the picture by **cutting equal amounts off each end** of the picture to keep the image centered. If your window well is less than 48" high, trim the picture lengthwise, **centering the desired portion of the picture** by trimming appropriate amounts from the top and bottom.
- Step 4. Thoroughly clean along the height of the areawall where the image will end next to the wall or window frame (where you place provided adhesive) and attach short adhesive strips spaced evenly to the window well.
- Step 5. Starting at one end, press the picture into the adhesive and form the picture to the window well attaching the ends into the adhesive. Again from one end, work the trim piece with gripping tongue to the outside (away from the foundation) around the top bead of the areawall. This seals the top from moisture and debris while securing the picture to the areawall. Nice!
- Step 6. Now replace or add the landscaping rock you scraped back from the bottom of the window well to hold the bottom of the picture against the well. A minimum of 4" to 6" of decorative stone is recommended for drainage. That's it!

**Lighting kits:** Be creative! We recommend installing solar power photo cell lighting (available at your local home center) in the bottom of you window well enhancing your

Window Well Pictures after dark. Enjoy your improved outlook on life!