



# What is "Egress"?


A "means of egress" is simply a basement window that provides an additional way out in case of emergency.

Window opening must be a minimum 5.7 sq. ft. and the egress well space must be a minimum 9 sq. ft. Add a Life-Step™ or Corner Step™ egress ladder if the window-well is 44" deep (or more).

Add a Safe-T-View Cover™ hybrid egress window well cover to protect for fall hazard.

## Egress Window Styles

Red box denotes required 9 sq. ft egress space within window well\*

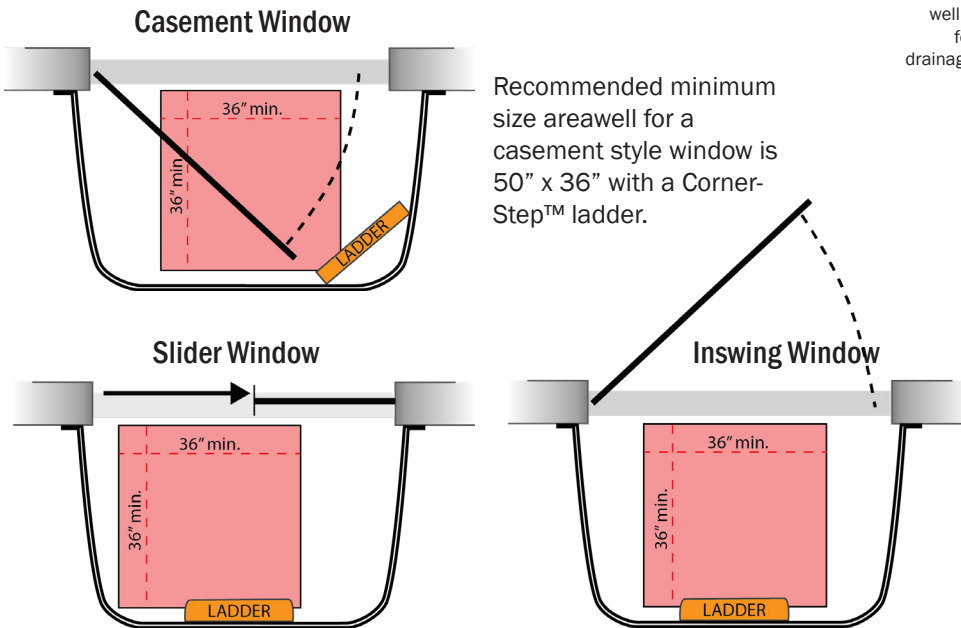


Minimum size window well for both a slider and inswing style window are 42" x 36" with a Life-Step™ ladder.

\*Check with your local building inspector to verify your code requirements before ordering or installing any areawall.

Call you Local Diggers Hotline


Homes with Ufer grounding and any improper electrical system grounding voids all claims for corrosion. All metal products must be isolated from stray electrical current

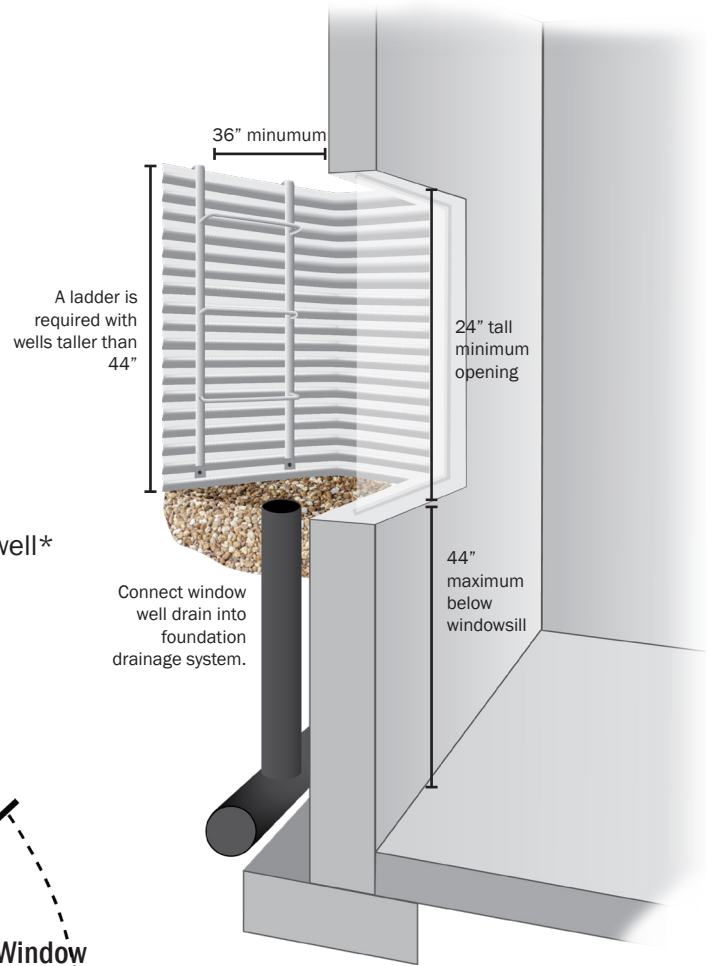

## Egress Well Sizing

Example: MFG ID EC4236-48

EC	42	36	-	48
Economy Casement	"A"	"B"		"C"

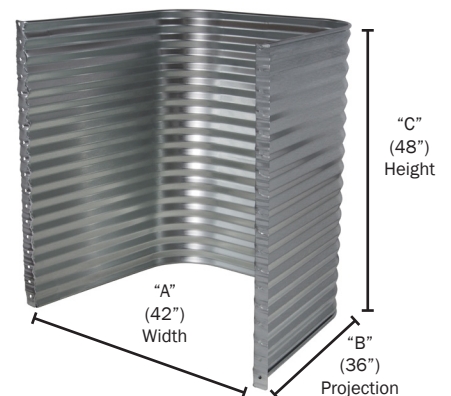

**St. Paul Corrugating Co, Inc.**  
Email: info@stpaulcorrugating.com  
Web: stpaulcorrugating.com  
700 39th Ave NE  
Minneapolis MN 55421  
Toll free: 1-800-439-9271



**Lux-Right**  
"The original areawall"